


180.01.02
Excerpt from the
Leybold Vacuum Full Line Catalog 2005
Product Section C17
Edition May 2005



Leak Testing Instruments

Helium Leak Detectors

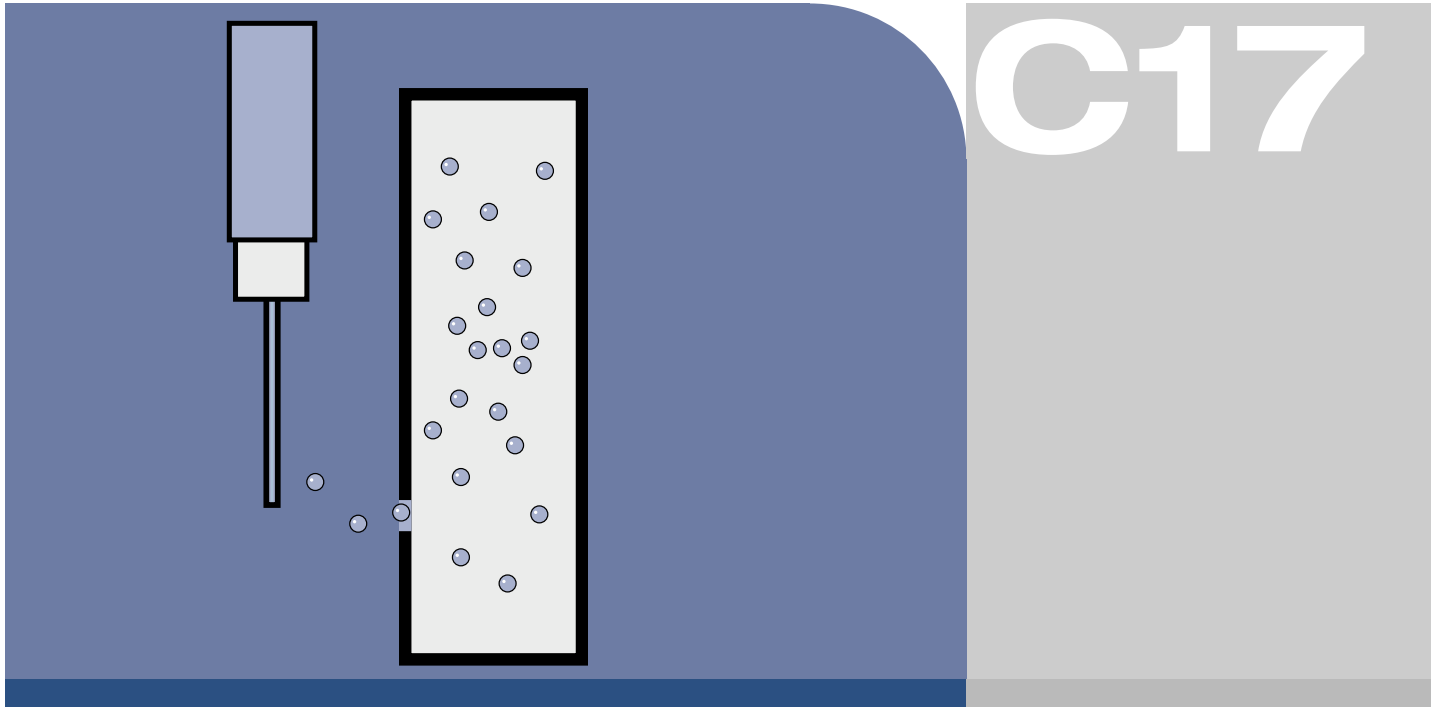

FOR SALES AND SERVICE PLEASE CALL:

PTB SALES T :: 626.334.0500
service@ptbsales.com
www.ptbsales.com

DATE SERVICED: _____

VIEW OUR INVENTORY

 **Leybold**
vacuum

General

Applications and Accessories	C17.03
Leak Detection - Leak Testing	C17.04
Leak Detection Methods	C17.05
Operating Principles of the Helium Leak Detectors	C17.07

Products

Helium Leak Detectors	
PhoeniXL 300	C17.10
PhoeniXL 300 Dry	C17.12
PhoeniXL 300 Modul	C17.14

Product-Related Accessories

Calibrated Leaks for Vacuum and Sniffer Applications	C17.18
Screw-in Calibrated Leaks	C17.20
Accessories for the PhoeniXL 300, PhoeniXL 300 Dry and PhoeniXL 300 Modul	C17.22
Helium Sample Probes (Sniffers)	C17.24

Other Accessories

Connection Flanges	C17.26
Connection Components	C17.26

Applications and Accessories

Test Instruments / Leak Detectors		PhoenixXL 300	PhoenixXL 300 Dry	PhoenixXL 300 Modul (oil-free)	PhoenixXL 300 Modul (oil-sealed)
Applications					
Semiconductor production		■	■	■	
Vacuum coating		■			■
Research and development		■	■	■	■
Chemistry/pharmaceutical		■	■	■	■
Metallurgy/furnaces		■			■
Lamps and tube manufacture		■			■
Automotive industry		■			■
Laser engineering		■	■		
Particle accelerators			■	■	
Analytical engineering		■	■	■	■
Systems with cryo pumps		■	■	■	■
Cooling and air conditioning			■	■	
Electrical engineering		■			■
Mechanical engineering		■			■
Power plants		■			■
Systems engineering		■			■
UHV applications		■	■	■	■
Accessories	Page				
Calibrated leaks	C17.18	■	■	■	■
Screw-in calibrated leaks	C17.20	■	■	■	■
Transportation means	C17.22	■	■	■	■
Partial flow system	C17.22	■	■		
PC software LeakWare	C17.22	■	■	■	■
Helium sniffers	C17.24	■	■	■	■
Exhaust filter sets		standard	standard		
Interfaces		standard	standard	standard	standard
Gas ballast facilities		standard			
Trigger relay boards		standard	standard	standard	standard
Seal kits		■	■	■	■


Leak Detection – Leak Testing

Whether a component or a system is leak-tight depends on the application it is to be used in and the leak rate that is acceptable. Absolutely leak-tight components and systems do not exist. A component is considered technically leak-tight if its leak rate remains below a value defined for this particular component. In order to provide a quantitative measure, the term “leak rate” with the symbol “ q_L ” was introduced. In vacuum technology $\text{mbar} \times \text{l} \times \text{s}^{-1}$ is used as the unit for leak rates.

A leak rate of $1 \text{ mbar} \times \text{l} \times \text{s}^{-1}$ exists in a closed vessel having a volume of 1 liter when the pressure increases by 1 mbar within one second, or in case of an overpressure it decreases by 1 mbar within one second.

$$q_L = \frac{V \times \Delta p}{\Delta t} \text{ (mbar} \times \text{l} \times \text{s}^{-1}\text{)}$$

The wide range of leak rates from several $100 \text{ mbar} \times \text{l} \times \text{s}^{-1}$ to below $10^{-11} \text{ mbar} \times \text{l} \times \text{s}^{-1}$ as they occur in practice necessitates the use of different leak detection principles and

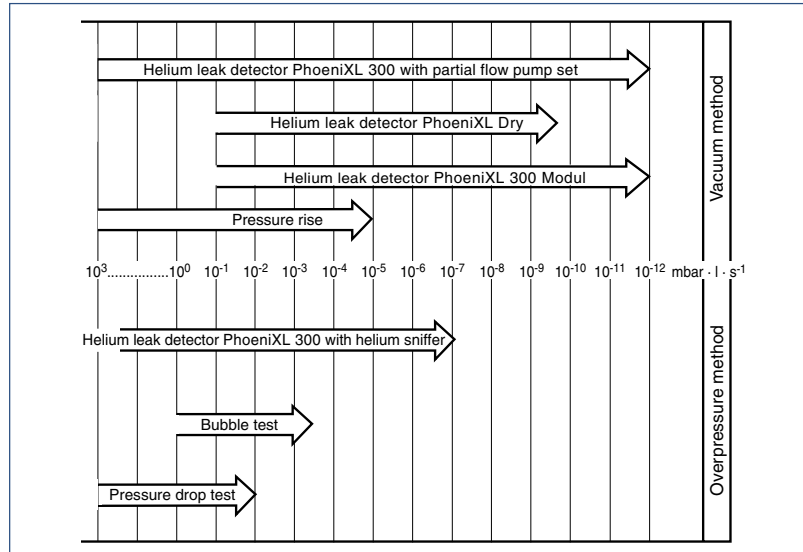

Overview of the leak rate detection ranges

hence leak detectors (see figure).

Besides the determination of the total leak tightness, it is usually important to locate the leak, quickly and precisely, in order to seal it. Instruments for local leak detection

are called leak detectors. The leak detectors presented in this product section can be used for the localization of leaks, and in addition some are suitable for determining the total leak rate of test objects.

Leak rate	$\text{Pa} \times \text{m}^3 \times \text{s}^{-1}$	$\text{atm} \times \text{cm}^3 \times \text{s}^{-1}$ 1) $\text{mbar} \times \text{l} \times \text{s}^{-1}$ 1)	$\text{atm} \times \text{cm}^3 \times \text{s}^{-1}$ 1) $\text{cm}^3 \times \text{s}^{-1}$ 1)
$\text{Pa} \times \text{m}^3 \times \text{s}^{-1}$	1	10	9.87
1 mbar x l x s ⁻¹ (He)	0.1	1	0.99
1 atm x cm ³ x s ⁻¹ *) = cm ³ (STP) x s ⁻¹	0.101	1.01	1
1 Torr x l x s ⁻¹)	0.133	1.33	1.33
1 kg x h ⁻¹ Luft	23.4	234	234
1 g/a C ₂ H ₂ F ₄ (R 134a)	6.41×10^{-7}	7.58×10^{-6}	6.3×10^{-6}

Leak rate	$\text{atm} \times \text{cm}^3 \times \text{s}^{-1}$ 1) $\text{Torr} \times \text{l} \times \text{s}^{-1}$ 1)	$\text{kg} \times \text{h}^{-1}$ Luft	g/a C ₂ H ₂ F ₄ (R 134a)
$\text{Pa} \times \text{m}^3 \times \text{s}^{-1}$	7.5	4.28×10^{-2}	2.28×10^6
1 mbar x l x s ⁻¹ (He)	0.75	4.3×10^{-3}	2.28×10^5
1 atm x cm ³ x s ⁻¹ *) = cm ³ (STP) x s ⁻¹	0.76	4.3×10^{-3}	2.3×10^5
1 Torr x l x s ⁻¹)	1	5.7×10^{-3}	3.0×10^5
1 kg x h ⁻¹ Luft	175	1	–
1 g/a C ₂ H ₂ F ₄ (R 134a)	4.8×10^{-6}	–	1

1) According to international system of units only $\text{Pa} \times \text{m}^3 \times \text{s}^{-1}$ is permissible

Leak Detection Methods

There are two main groups of leak detection methods; for both there are special instruments available:

Vacuum Methods

The equipment to be tested is evacuated. The pressure ratio between inside and outside is 0:1.

Overpressure Methods


The equipment to be tested is pressurized with a search gas or a search gas mixture.

The pressure ratio between inside and outside is over 1:1.

Between the two methods there exist many variations depending on the particular application.

General Notes

1. The lowest leak rates can only be measured by employing the vacuum method, whereby the following applies: The lower the leak rate, the higher the requirements are concerning cleanliness and ultimate vacuum.
2. If possible the test objects should be tested under the same conditions that will be used in their final application, i.e. parts for vacuum operation should be tested according to the vacuum method and parts for

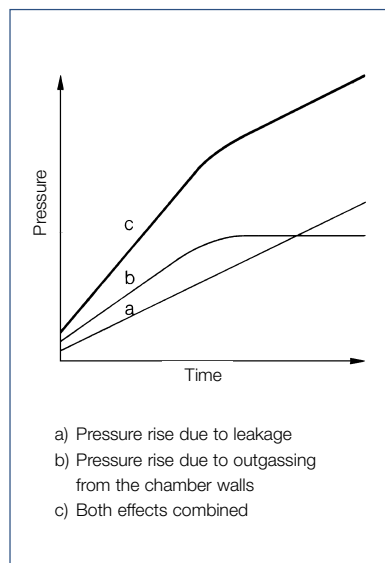

Pressure rise in a vacuum chamber after switching off the pump; double log. plot

overpressure operation should be tested using the overpressure method.

Leak Testing Based on Vacuum Methods

(Vacuum inside the test object)

Pressure Rise Method

With this method it is only possible to determine the total leak rate. The test object is evacuated with a vacuum pump or a vacuum pump system. A valve is used to isolate the test object from the vacuum pump. The pressure will then rise as a function of time. Curve (a) shows the theoretical pressure rise if there is only a leak. Curve (b) shows the pressure rise due to outgassing from the surfaces of the test object. This pressure rise tends to tail off in the direction of a saturation level. If in such a case the time allowed for monitoring the pressure rise is too short, a leak will be indicated which in reality does not exist. If one waits long enough for the pressure to rise, i.e. after the bend of curve (b) the outgassing process can then be disregarded, so that the leak rate can be determined from the known volume of the test object and the measured pressure rise over a fixed rise time (see equation on page 4). Curve (c) shows the pressure rise as it occurs in practice, where outgassing and leak rate add. The detectable leak rate depends on the volume of the test object, the obtained ultimate pressure and the outgassing from the test object. In connection with very large test


objects this method is time consuming if extremely low leak rates are to be determined in the fine and rough vacuum range.

Local Leak Detection

The test object is evacuated by a vacuum pump (auxiliary pump) until the pressure is low enough for the leak detector to operate. When using a helium leak detector, its own pump system will take care of further evacuation. Suspicious spots on the test object will then be sprayed with a fine jet of search gas. Search gas entering through leaks into the test object is pumped out by the vacuum pump and it is converted by the leak detector into an electrical signal which is then displayed. This permits rapid detection and determination of the size of even the smallest leaks.

Integral Method

Determination of the total leak rate of a test object. The testing arrangement is the same as for local leak detection, but in this case the test object is not sprayed with search gas on selected areas, but it is surrounded by a hood or a chamber which is filled with the search gas. Thus the entire outer surface of the test object comes into contact with the search gas. If the search gas enters the test object, the total leak rate is indicated independently of the number of existing leaks. With helium leak detectors it is possible to determine the helium content of the air. This is utilized in the detection of gross leaks.

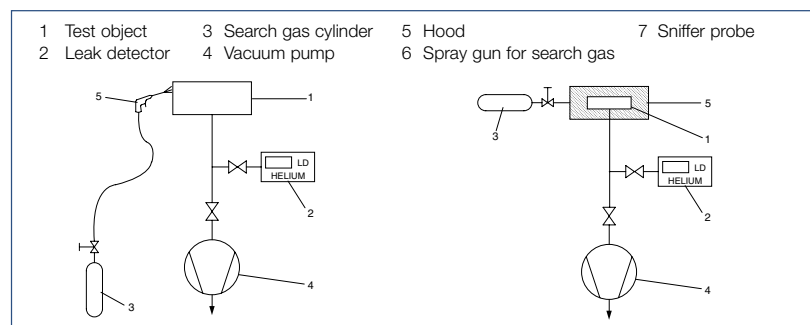

Local leak detection – Evacuated test object (left) and Integral method – Evacuated test object (right)

Leak Testing Based on Overpressure Methods

(Overpressure within the test object)

Pressure Drop Method

The test object is filled with a gas (for example air or nitrogen) until the testing pressure is reached. Precision vacuum gauges are used to detect a possible pressure drop during the testing period. This method is simple to implement, it is suitable for the determination of gross leaks and can be improved upon by using differential pressure gauges. By applying soap solutions or similar, leaks can be located.

Local Leak Detection with Leak Detectors – Sniffing

The test object is filled with the search gas or the search gas/air mixture to which the leak detector is sensitive. The leak detector is equipped with a sniffer probe, whereby there is a low pressure at the probe tip. If the sniffer tip passes suspicious points on the test object the search gas coming out of the leak is sucked in and transferred to the detection system of the leak detector. After conversion into electrical signals these are displayed optically and acoustically by the leak detector.

Integral Method – Hood Test

To determine the total leak rate of a test object subjected to a search gas overpressure, the test object is

surrounded by a hood of a known volume. The search gas which escapes through the leaks collects in the hood.

After a fixed accumulation period a sniffer probe is used to measure the concentration of the search gas which has collected in the hood. Before this the leak detector should be calibrated by a reference measurement using a known search gas concentration.

The leak rate can then be determined by the equation for q_L where V is the volume of the hood, Dp is the partial pressure difference of the search gas (concentration change) and t is the accumulation period.

Uncertainties in the determination of the volume, leaks in the hood and a wrong accumulation period make precise leak rate measurements based on this method very questionable.

Integral Method – Vacuum Hood Test

This test is a variation of the hood test described above, which has considerable advantages. A vacuum chamber which is evacuated by an auxiliary pump and which is connected to a leak detector is used as the hood. The search gas escaping through the leaks is converted by the detection system of the leak detector into electrical signals which are immediately displayed. After calibration of the leak detector with a calibrated leak it

is possible to quantitatively determine the total leak rate.

This method permits the detection of very small leaks and is especially suited for automatic industrial leak detection.

Integral Method – Bombing-Test


This method is used for testing hermetically sealed components such as transistors, IC-packages or dry reed relays. It is basically a variation of the vacuum hood test. Here the test objects are placed in a vessel which is pressurized with the search gas - preferably helium. At a fairly high search gas pressure and after a period of up to several hours it is tried to enrich the search gas inside leaky test objects. This is the actual so called "bombing" process.

After this, the test objects are transferred to a vacuum chamber and their total leak rate is determined in the same way as in the vacuum hood test. During evacuation of the vacuum chamber down to the required testing pressure, those test objects which have a gross leak already lost their accumulated search gas. These parts are not detected as leaking during the actual leak test. Therefore the test with the vacuum chamber is often preceded by a "bubble test".


This method permits the detection of the lowest leak rates and is used mainly in automatic industrial leak testing especially when it is not possible to fill the parts with gas in any other way.

Key to the Figures


- | | | | |
|-----------------|-----------------------|----------------------------|-----------------|
| 1 Test object | 3 Search gas cylinder | 5 Hood | 7 Sniffer probe |
| 2 Leak detector | 4 Vacuum pump | 6 Spray gun for search gas | |

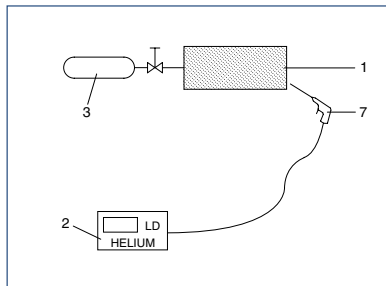

Leak detection –
Search gas overpressure in the test object

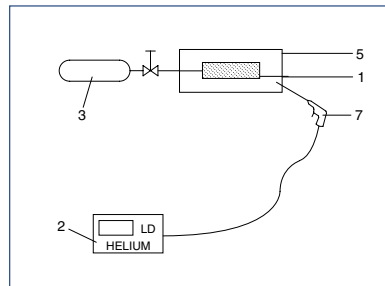

Integral method (search gas accumulation)
Search gas overpressure in the test object

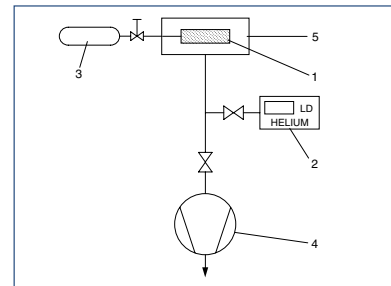

Integral-Method –
Search gas overpressure in the test object

Operating Principles of the Helium Leak Detectors

Operating Principle

A helium leak detector permits the localization of leaks and the quantitative determination of the leak rate, i.e. the gas flow through the leak. Such a leak detector is therefore a helium flow meter.

In practice the leak detector performs this task by firstly evacuating the part which is to be tested, so that gas from the outside may enter through an existing leak due to the pressure difference present. If only helium is brought in front of the leak (for example by using a spray gun) this helium flows through the leak and is pumped out by the leak detector. The helium partial pressure present in the leak detector is measured by a sector mass spectrometer and is displayed as a leak rate. This is usually given in terms of volume flow of the helium (pV-flow).

Important Specifications

The two most important features of a leak detector are its measurement range (detection limits) and its response time.

The measurement range is limited by the lowest and the highest detectable leak rate. The lowest detectable leak rate is defined by the sum of drift and noise in the most sensitive measurement range. Usually the sum of noise amplitude and zero drift per minute is made to be equivalent to the lowest detectable leak rate. With leak detectors the amount of drift is so low, that the noise amplitude alone determines the detection limit.

The highest detectable leak rate depends strongly on the method employed. Especially the counterflow method and partial flow operation (see description below) permit the measurement of very high leak rates even with a sensitive helium leak detector. In addition the multistage switchable high impedance input amplifiers of the leak detectors also permit the measurement of high leak rates.

In practical applications, especially in the localization of leaks the response time is of great significance. This is the time it takes from spraying the test

object with helium until a measured value is displayed by the leak detector. The response time of the electronic signal conditioning circuitry is an important factor in the overall response time. In the case of leak detectors the response time of the electronic circuitry is well below 1 s.

The volume flow rate for helium at the point of the test object is of decisive significance to leak detection on components which are pumped down solely by the leak detector. This volume flow rate provided by the leak detector takes care of the helium entering through a leak and it ensures quick detection by the leak detector. On the other hand the volume of the test object delays the arrival of the helium signal. The response time can be calculated on the basis of the following simple equation:

$$\text{Response time for helium } t_A = 3 \frac{V}{S_{\text{He}}}$$

(for 95% of the final value)

with V = Volume of the test object
 S_{He} = Volume flow rate for helium at the point of the test object
 (or at the inlet of the leak detector, if it alone pumps down the test object).


Main Flow Method

The classic operating principle of helium leak detectors is based on the main flow method. Here the entire helium flow passes through the high vacuum system of the leak detector, where the mass spectrometer measures the partial pressure of the helium. In this, the use of a liquid nitrogen cold trap is essential to remove water vapor or other condensable gases in the vacuum system which impair the operation. Moreover, the use of a cold trap permits the low operating pressures for the mass spectrometer to be reached (below 10^{-4} mbar) despite the directly connected (and possibly contaminated) test object.

The advantages of the main flow method are:

- Highest sensitivity, i.e. low detection limit
- Short response time due to a high volume flow rate at the inlet.

The main flow method is thus especially suitable for stationary leak detection on components. Leak detection on systems having their own pump sets and at higher pressures requires the use of an external throttling valve, i.e. a partial flow with subsequently reduced sensitivity is utilized.

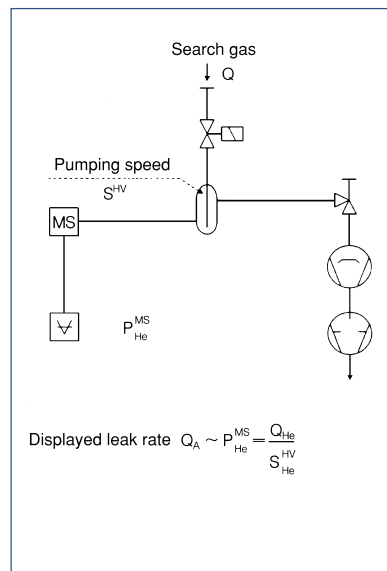

Main flow method

Counterflow Method


With this method the test object is not connected to the high vacuum. Instead it is connected to the forevacuum (between turbomolecular pump and backing pump), so that the entire gas flow (especially water vapor) does not contribute to the pressure increase in the mass spectrometer. Thus a cold trap is no longer required!

The helium which now enters the forevacuum can still be detected, as it is able to flow against the pumping direction of the turbomolecular pump into the mass spectrometer. This is due to the high particle velocity of the helium. The sensitivity of this counterflow arrangement is equal to that of the main flow principle, provided the right combination of volume flow rate of the backing pump and helium compression of the turbomolecular pump is used.

The advantages of the counterflow method are:

- No liquid nitrogen is required
- High permissible inlet pressures (i.e. pressure within the test object)

This makes the counterflow method especially suitable for mobile leak detection on systems. For leak detection on larger components where a short response time is essential (i.e. high volume flow rate) an additional turbomolecular pump stage is required at the inlet of the leak detector.

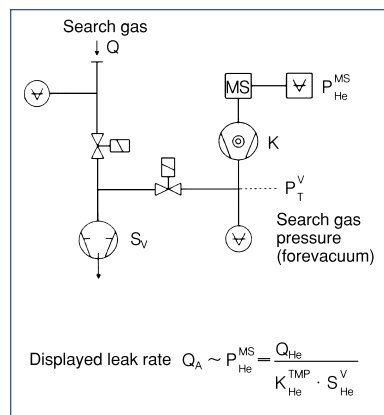


Counterflow method

Partial Flow Method

In order to expand the measurement range in the direction of higher leak rates and for operation at higher inlet pressures, helium leak detectors incorporate a partial flow or a gross leak system. This consists basically of a throttle and a rotary vane pump. At pressures above the normal inlet pressure (main flow: above 10^{-2} mbar, counterflow: above 10^{-1} mbar) or in the case of high helium leak rates, the inlet valve is closed and the main flow is allowed to enter the partial flow pump, whereas only a small part enters the leak detector via the partial flow throttle. Thus the total pressure and the helium pressure are dropped to values suitable for operation of the leak detector.

To obtain correct leak rate readings in the partial flow mode, the partial flow ratio, i.e. the ratio between the actually measured gas flow and the total gas flow must be known and stable.

In all leak detectors this is achieved by a partial flow throttle made of ruby with a precisely machined hole. This ensures that the quantitatively determined leak rates are always correct without calibration, even for gross leaks.

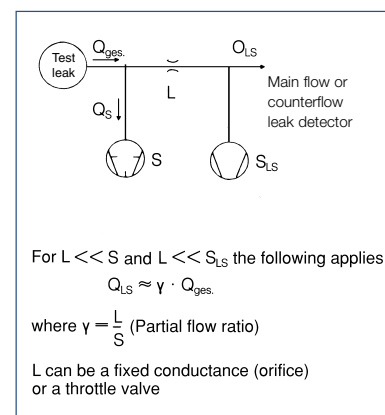

Partial flow method

Calibration of Helium Leak Detectors with Calibrated Leaks

In the process of leak detection one expects that a test object which does not have a leak produces a zero reading on the leak detector. In this any malfunctions are excluded. Thus calibrated leaks, i.e. artificial leaks which produce a known helium leak rate are essential for reliable results.

To obtain a quantitatively correct leak rate reading the sensitivity of the leak detector must also be adjusted. This requires the use of a calibrated leak.

Leybold offers calibrated helium leaks of various designs covering the range between 10^{-9} to 10^{-4} mbar x l x s⁻¹ as part of the standard range of products. All leak rates are traceable to the standards of the German

Calibration Service controlled by the PTB (Federal Institution of Physics and Technology). If requested each helium calibrated leak can be supplied with a calibration certificate issued by the German Calibration Service. The calibration itself is performed by the German Calibration Service for Vacuum which is run by Leybold on behalf of the PTB.

Helium Leak Detector PhoenixXL 300



PhoenixXL 300

Advantages to the User

- Lowest detectable leak rate
- Short He recovering time condition
- Quick start-up
- Extremely fast response time
- Oil-free gas admission system
- One of the smallest helium leak detectors in the world
- High sensitivity
- Fast leak rate readout also at low leak rates

Typical Applications

Leak tests in connection with

- Quality assurance
- Automotive industry
- Analytical instruments
- Systems manufacture
- Power station engineering
- Research and development
- Semiconductor industry
- High vacuum and ultra-high vacuum engineering
- Ideal tool for industrial series production testing – in the cooling and air conditioning industries, for example

The PhoenixXL 300 is a portable multi-purpose helium leak detector and equally well suited to both service and series production testing.

Its rugged design and its ease of use make the PhoenixXL 300 to a user-friendly leak detector in its class.

In connection with the sniffer lines which are available as accessories the PhoenixXL 300 may also be used as a sniffer leak detector.

In connection with a partial flow pump set the PhoenixXL 300 may also be used for the detection of leaks on large vessels.

Technical Data	PhoeniXL 300	
Smallest detectable helium leak rate (Vacuum mode) mbar x l x s ⁻¹		≤ 5 x 10 ⁻¹²
Smallest detectable helium leak rate (Sniffer mode) mbar x l x s ⁻¹		< 1 x 10 ⁻⁷
Max. detectable helium leak rate (Vacuum mode) mbar x l x s ⁻¹		1 x 10 ⁻¹
Max. inlet pressure mbar (Torr)		15 (11.25)
with partial flow pump set mbar (Torr)		1000 (750)
Pumping speed during the evacuation process		
50 Hz m ³ x h ⁻¹ (cfm)		2.5 (1.5)
60 Hz m ³ x h ⁻¹ (cfm)		3.0 (1.8)
Pumping speed for helium at the inlet l/s		> 2.5
Time constant of the leak signal (blanked off, 63 % of final value) s		< 1
Leak rate measurement range mbar x l x s ⁻¹		1 x 10 ⁻¹² to 1 x 10 ⁻¹
Units of measurement (selectable)	mbar x l x s ⁻¹ , atm x cc x sec ⁻¹ , Pa x m ³ x s ⁻¹ , ppm, Torr x l x s ⁻¹ , g/a, oz/y	
Time until ready for operation min		< 2
Mass spectrometer	180° magnetic sector field	
Ion source	2 yttrium/iridium long-life cathodes	
Detectable masses amu		2, 3 and 4
Test port DN		1 x 25 KF
Dimensions (W x H x D) mm		495 x 440 x 315
Weight kg (lbs)		40.0 (88.2)
Ordering Information	PhoeniXL 300	
PhoeniXL 300 115 V / 60 Hz, mbar readout, with integrated calibrated leak TL 7		Part No. 251 000
230 V / 50/60 Hz, mbar readout, with integrated calibrated leak TL 7		Part No. 250 000
PC software LeakWare		Part No. 140 90
Seal kit		Part No. 200 99 150
For further accessories see Section "Accessories for PhoeniXL 300, PhoeniXL 300 Dry und PhoeniXL 300 Modul"		

Portable and Dry Helium Leak Detector PhoeniXL 300 Dry



PhoeniXL 300 Dry

The PhoeniXL 300 Dry is a compact portable helium leak detector capable of meeting the highest cleanliness requirements.

Based on the well-proven technology of the PhoeniXL 300 Dry, equipped with an oil-free pump system, the PhoeniXL 300 Dry meets the highest requirements concerning cleanliness while at the same time being small in size.

Advantages to the User

- Oil-free “dry” pump system
- Small footprint
- Quick start-up
- Extremely fast response

Typical Applications

Leak tests with stringent requirements concerning cleanliness, for example

- Semiconductor industry
 - after repairs or maintenance work
- Semiconductor industry
 - Production of semiconductor components
- Pharmaceutical/medicine
- Laser

Technical Data	PhoeniXL 300 Dry
Smallest detectable helium leak rate (Vacuum mode) $\text{mbar} \times \text{l} \times \text{s}^{-1}$	$\leq 2 \times 10^{-11}$
Smallest detectable helium leak rate (Sniffer mode) $\text{mbar} \times \text{l} \times \text{s}^{-1}$	$< 1 \times 10^{-7}$
Max. detectable helium leak rate (Vacuum mode) $\text{mbar} \times \text{l} \times \text{s}^{-1}$	1×10^{-1}
Max. permissible inlet pressure mbar (Torr)	15 (11.25)
Pumping speed during the evacuation process	
50 Hz $\text{m}^3 \times \text{h}^{-1}$ (cfm)	1.6 (0.94)
60 Hz $\text{m}^3 \times \text{h}^{-1}$ (cfm)	1.9 (1.12)
Pumping speed for helium at the inlet l/s	> 2.5
Time constant of the leak signal (blanked off, 63 % of final value) s	< 1
Leak rate measurement range $\text{mbar} \times \text{l} \times \text{s}^{-1}$	1×10^{-11} to 1×10^{-1}
Units of measurement (selectable)	$\text{mbar} \times \text{l} \times \text{s}^{-1}$, $\text{atm} \times \text{cc} \times \text{sec}^{-1}$, $\text{Pa} \times \text{m}^3 \times \text{s}^{-1}$, ppm, Torr $\times \text{l} \times \text{s}^{-1}$, g/a, oz/y
Time until ready for operation min	< 2
Mass spectrometer	180° magnetic sector field
Ion source	2 yttrium/iridium long-life cathodes
Detectable masses amu	2, 3 and 4
Test port DN	1 x 25 KF
Dimensions (W x H x D) mm	495 x 440 x 315
Weight kg (lbs)	36 (79.4)
Ordering Information	PhoeniXL 300 Dry
PhoeniXL 300 Dry 115 V / 60 Hz, mbar readout, with integrated calibrated leak TL 7	Part No. 251 001
230 V / 50/60 Hz, mbar readout, with integrated calibrated leak TL 7	Part No. 250 001
PC software LeakWare	Part No. 140 90
Seal kit	Part No. 200 99 150
For further accessories see Section "Accessories for PhoeniXL 300, PhoeniXL 300 Dry und PhoeniXL 300 Modul"	

Mobile and Flexible Helium Leak Detector PhoeniXL 300 Modul



PhoeniXL 300 Modul

The PhoeniXL 300 Modul combines the excellent characteristics of the PhoeniXL 300 with those of the pump system which has been added to the basic leak detector module.

This results in two basic groups:

- Dry, mobile leak detectors with selectable pumping speed
- Oil-sealed, mobile leak detectors offering a high pumping speed at an optimum price-to-performance ratio.

PhoeniXL 300 Modul with Oil-Sealed Backing Pump

This combination represents a powerful leak detector, the pumping speed of which is adapted to the particular application in each case.

Advantages to the User

- Cost-effective leak detector
- Pumping speed optimized for the particular application
- Fast response
- Quick recovery
- High sensitivity
- Fast leak rate readout also at low leak rates

Typical Applications

All applications involving short cycles and/or larger volumes and which require a mobile system, like for example:

- Automotive industry
- Cooling and air conditioning
- Manufacturers of furnaces/machines/systems
- Packaging

The PhoeniXL 300 Modul represents the basic unit of an entire family of leak detectors. It is based on the PhoeniXL³⁰⁰, is not equipped with an integrated backing pump and may be easily adapted by adding an external backing pump to suit a wide range of applications.

PhoeniXL 300 Modul with Dry-Compressing Scroll Pump

This combination represents a dry high-performance leak detector.

Advantages to the User

- Very high pumping speed which is also acceptable for testing semiconductor production chambers without having to use their own pump systems
- Fast response
- Quick recovery (after helium contamination)
- Absolutely dry
- High sensitivity

Typical Applications

All applications which demand a clean process, like for example:

- Semiconductor industry (chip manufacturers)
- Semiconductor industry (tool manufacturers and sub-contractors)
- High purity gas industry
- Research and development
- UHV applications

Technical Data	PhoenixL 300 Modul	
	with Rotary Vane Vacuum Pump	with Scroll Pump
Smallest detectable helium leak rate (Vacuum mode) $\text{mbar} \times \text{l} \times \text{s}^{-1}$	$\leq 5 \times 10^{-12}$	$\leq 8 \times 10^{-12}$
Smallest detectable helium leak rate (Sniffer mode) $\text{mbar} \times \text{l} \times \text{s}^{-1}$	$< 1 \times 10^{-7}$	$< 1 \times 10^{-7}$
Max. detectable helium leak rate (Vacuum mode) $\text{mbar} \times \text{l} \times \text{s}^{-1}$	10^{-1}	10^{-1}
Max. permissible inlet pressure mbar (Torr)	15 (11.25)	15 (11.25)
Pumping speed during the evacuation process scroll pump / TRIVAC D 25 B pump (60 Hz) $\text{m}^3 \times \text{h}^{-1} \text{ (cfm)}$	30 (18)	36 (21.6)
Pumping speed for helium at the inlet flange l/s	> 2.5	> 2.5
Time constant of the leak signal (blanked off, 63 % of final value) s	< 1	< 1
Leak rate measurement range $\text{mbar} \times \text{l} \times \text{s}^{-1}$	1×10^{-12} to 1×10^{-1}	1×10^{-12} to 1×10^{-1}
Units of measurement (selectable)	$\text{mbar} \times \text{l} \times \text{s}^{-1}$, $\text{atm} \times \text{cc} \times \text{sec}^{-1}$, $\text{Pa} \times \text{m}^3 \times \text{s}^{-1}$, ppm, $\text{Torr} \times \text{l} \times \text{s}^{-1}$, g/a, oz/y	$\text{mbar} \times \text{l} \times \text{s}^{-1}$, $\text{atm} \times \text{cc} \times \text{sec}^{-1}$, $\text{Pa} \times \text{m}^3 \times \text{s}^{-1}$, ppm, $\text{Torr} \times \text{l} \times \text{s}^{-1}$, g/a, oz/y
Time until ready for operation min	≤ 2	≤ 2
Mass spectrometer	180° magnetic sector field	180° magnetic sector field
Ion source	2 yttrium/iridium long-life cathodes	2 yttrium/iridium long-life cathodes
Detectable masses amu	2, 3 and 4	2, 3 and 4
Test port DN	1 x 25 KF	1 x 25 KF
Dimensions (W x H x D) mm	495 x 440 x 315	495 x 440 x 315
Weight (without pump) kg (lbs)	30 (66.2)	30 (66.2)

The following Part Nos. contain only the individual components needed for assembly by the customer.

Ordering Information	PhoeniXL 300 Modul
PhoeniXL 300 Modul without backing pump 115 - 230 V / 50/60 Hz	Part No. 250 002
PC software LeakWare	Part No. 140 90
Seal kit	Part No. 200 99 150
Pumps TRIVAC D 25 B; 230 V, 50/60 Hz Scroll, 100 - 230 V / 50/60 Hz	Part No. 113 35 Part No. 200 000 214
CART 300	upon request
For further accessories see Section "Accessories for PhoeniXL 300, PhoeniXL 300 Dry und PhoeniXL 300 Modul"	

Calibrated Leaks for Vacuum and Sniffer Applications



Test leaks

Calibrated Leaks for Vacuum Applications

TL 4 and TL 6

Calibrated leaks without gas reservoir (capillary type of leak) for sensitivity and signal response time determinations during vacuum leak detection and for determination of sniffer sensitivity for overpressure leak detection. Nominal leak rate ranges 10^{-4} mbar \times l \times s $^{-1}$ for TL 4 and 10^{-6} mbar \times l \times s $^{-1}$ for TL 6. Suitable for helium. A purging valve with hose nozzle permits a rapid exchange of the gas in the dead volume.

TL 4-6

Helium calibrated leak (capillary leak) for gross leaks, adjustable in the range between 10^{-4} to 10^{-6} mbar \times l \times s $^{-1}$, with exchangeable helium reservoir, pressure gauge and two manually operated valves. For calibration of leak rate readings and the alignment of helium mass spectrometers in the vacuum pressure range and for determining the sensitivity of sniffers in the overpressure range.

TL 5

Calibrated helium leak (capillary leak) with reservoir which may be refilled and with a leak rate in the range of 10^{-5} mbar \times l \times s $^{-1}$. Special calibrated leak for use in a vacuum.

TL 7

Helium calibrated leak (capillary leak) with helium reservoir and electromagnetically operated valve. Leak rate range 10^{-7} mbar \times l \times s $^{-1}$. The electromagnetically operated valve provided permits the opening and closing of the calibrated leak to be controlled by the leak detector's software.

TL 8 and TL 9

Helium calibrated leak calibrated for a leak rate in the range of 10^{-8} mbar \times l \times s $^{-1}$ (helium leak rate) for TL 8 and 10^{-9} mbar \times l \times s $^{-1}$ for TL 9, with gas reservoir and diaphragm shutoff valve. For alignment of a helium mass spectrometer, for calibration of the leak rate display of helium leak detectors and for response time measurements in connection with larger volumes.

Note

All calibrated leaks with the exception of the TL 5 are not suited for use in a vacuum.

Calibrated leaks are required for the alignment of mass spectrometers, for the calibration of leak rates and for determining the response time of vacuum systems.

Advantages to the User

- Factory certificate (included) in accordance with DIN 55 350-18-4.2.2
- Highly accurate
- Very low temperature dependence
- Determination of the nominal leak rate by comparison with a calibrated leak having a PTB ¹⁾ certificate
- DKD ²⁾ certificate (optional) traceable to PTB
- Custom models for special applications

The nominal leak rate applies only if the calibrated leak has been connected to a vacuum system at a pressure of less than 1 mbar.

¹⁾ Federal Institution of Physics and Technology

²⁾ German Calibration Service

Calibrated Leaks for Sniffer Applications

These calibrated leaks have been set to a fixed value within the typical leak rate range (see Ordering Information). The exchangeable calibration gas reservoir is monitored through the built-in manometer.

Helium calibrated leaks

S-TL 4 to S-TL 6 with leak rates from 10^{-4} to 10^{-6} mbar x l x s⁻¹.

Set of Calibrated Leaks for Power Plants

These three calibrated leaks of 1000, 100 and 10 mbar x l x s⁻¹ allow leak tests under partial flow conditions under the ambient conditions of power plants.

Technical Data	Leak Rate Range	Leak Detection Method	Connection Flange
TL 4, without helium gas reservoir	10^{-4} mbar x l x s ⁻¹	Vacuum and sniffer	DN 16 KF
TL 6, without helium gas reservoir	10^{-6} mbar x l x s ⁻¹	Vacuum and sniffer	DN 16 KF
TL 4-6, with helium gas reservoir	10^{-4} to 10^{-6} mbar x l x s ⁻¹	Vacuum and sniffer	DN 16 KF
TL 5, with helium gas reservoir	10^{-5} mbar x l x s ⁻¹	Vacuum	Discharging opening
TL 7, with helium gas reservoir	10^{-7} mbar x l x s ⁻¹	Vacuum (for installation within the PhoeniXL 300)	Nozzle
TL 8, with helium gas reservoir	10^{-8} mbar x l x s ⁻¹	Vakuum	DN 10 KF
TL 9, with helium gas reservoir	10^{-9} mbar x l x s ⁻¹	Vakuum	DN 10 KF
S-TL 4, with helium gas reservoir	10^{-4} mbar x l x s ⁻¹	Sniffer	Nozzle
S-TL 5, with helium gas reservoir	10^{-5} mbar x l x s ⁻¹	Sniffer	Nozzle
S-TL 6, with helium gas reservoir	10^{-6} mbar x l x s ⁻¹	Sniffer	Nozzle

Ordering Information	Calibrated Leak
TL 4, without helium gas reservoir ¹⁾	Part No. 155 65
TL 6, without helium gas reservoir ¹⁾	Part No. 155 66
TL 4-6, with helium gas reservoir ¹⁾	Part No. 155 80
TL 5, with helium gas reservoir ¹⁾	Part No. 122 67
TL 7, with helium gas reservoir ¹⁾ for installation within the PhoeniXL 300	Part No. 140 23
TL 8, with helium gas reservoir ¹⁾	Part No. 165 57
TL 9, with helium gas reservoir ¹⁾	Part No. 144 08
S-TL 4, with helium gas reservoir ¹⁾	Part No. 122 37
S-TL 5, with helium gas reservoir ¹⁾	Part No. 122 38
S-TL 6, with helium gas reservoir ¹⁾	Part No. 122 39
Set of calibrated leaks for power plants 1000, 100, 10 mbar x l x s ⁻¹	Part No. 115 16
Rubber bladder	Part No. 200 20 218
Hose clamp	Part No. 200 20 217
Helium can; 1 l, 12 bar (for TL 4-6)	Part No. 252 001
DKD calibration for TL 7/8	Part No. 154 15


¹⁾ with factory certificate

Screw-in Calibrated Leaks

The manufacturers of helium leak testing systems are in need of calibrated leaks of various sizes with individually adjusted leak rates for the purpose of setting up and calibrating their systems.

Depending on the type of application these calibrated leaks are either installed in the test sample as a master leak or used as a continually available facility in the test chamber itself.

Leybold is now offering a new family of calibrated leaks which are capable of meeting the requirements concerning type and required leak rate.

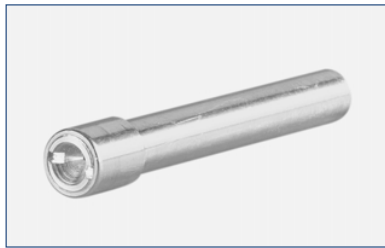

Calibrated leak with screw-in sleeve

Calibrated Leak with Screw-in Sleeve


Is used as a so-called master leak to check the entire helium leak testing system.

Generally two leaktight test samples are equipped with these calibrated leaks. These will ensure proper separation between “passed and rejected” parts.

They are fitted to the customer's test samples either by a welded joint or the screw-in sleeve is glued in place.

Typical Applications

- As a master calibrated leak built-in directly into the test sample
- Directly installed to the test chamber
- Use as a calibrated leak for sniffer applications

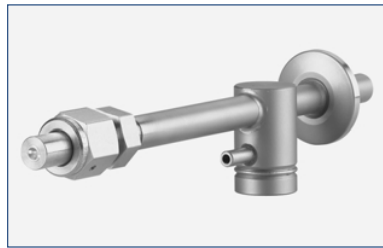

Calibrated leak with pin type casing

Calibrated Leak with Pin Type Casing

Serves as a calibrated leak for the entire helium leak testing system without being influenced by the presence of a test sample.

Here a dummy is placed in the test chamber. The connection to the test chamber is directly by a DN 10 KF fitting. The test gas connection is either by a VCO fitting or a hose nozzle for flexible connections.

Connections on the side of the customer's system are

- 16 KF running to the vacuum chamber
- Hose nozzle, 10 mm in diameter or VCO fitting, 10 mm in diameter

Advantages to the User

- Various types adapted to different customer requirements
- Simple to operate
- Easy to install
- Ideal installation dimensions



Calibrated leak with cylindrical casing


Calibrated Leak with Cylindrical Casing

Is used to check the sensitivity of a sniffing facility.


Before and after the actual test, the operator checks the sensitivity of his test facility within the scope of a plausibility check.

The connection on the side of the customer's system is provided via a VCO fitting for a diameter of 10 mm.


- As a rule, all calibrated leaks are supplied with a certificate (factory certificate) indicating the leak rate which has been set up

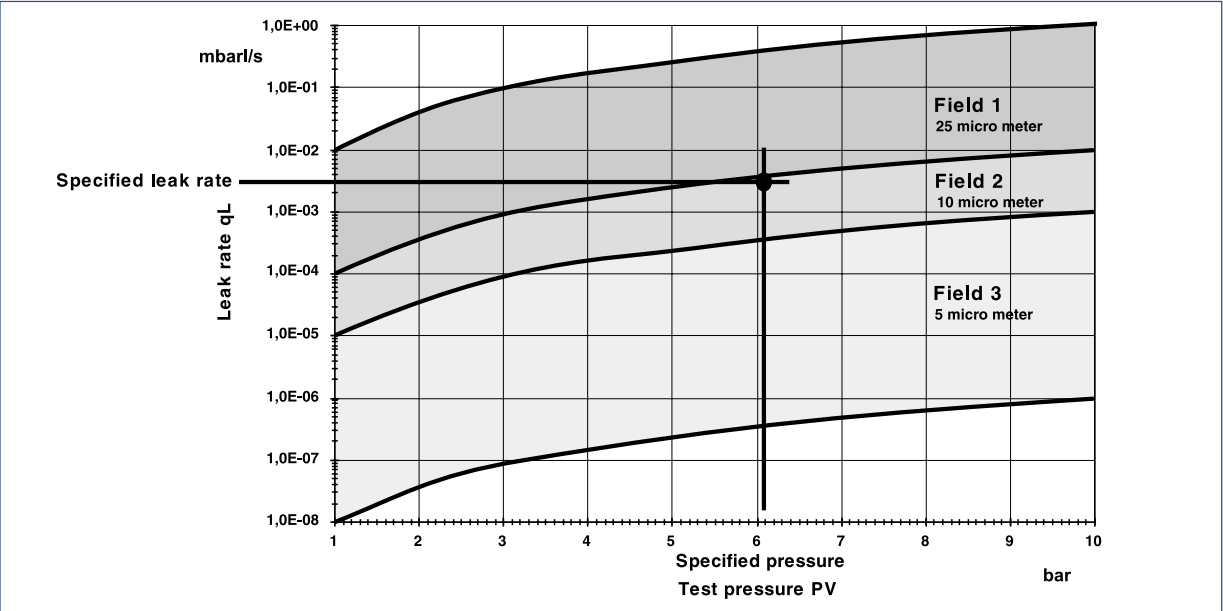


Leak rate as a function of applied test pressure vs. 0 bar

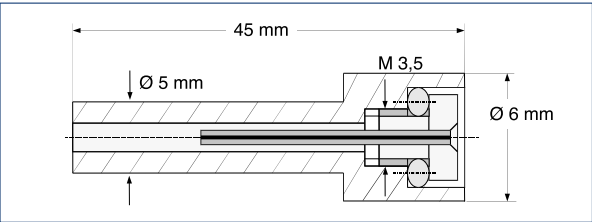


Calibrated leak with screw-in sleeve

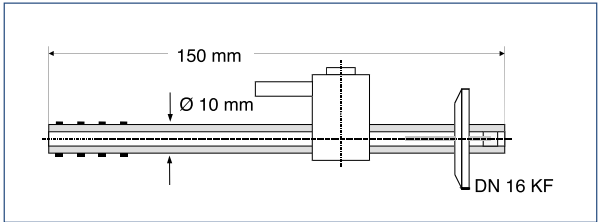

Calibrated leak with pin type casing and hose nozzle

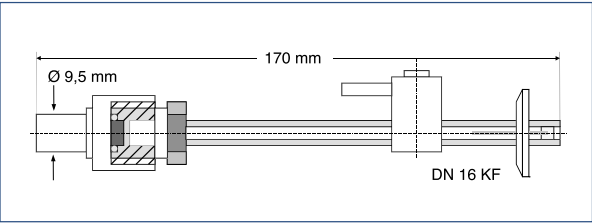

Calibrated leak with pin type casing and VCO fitting

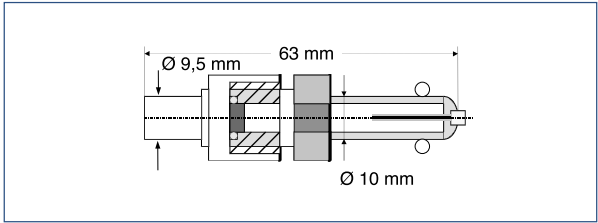

Calibrated leak with cylindrical casing and VCO fitting

Technical Data		Calibrated Leak			
Leak rate	mbar x l x s ⁻¹	Casing only	Field 1 1 - 10 ⁻⁴	Field 2 10 ⁻² - 10 ⁻⁵	Field 3 10 ⁻³ - 10 ⁻⁸
		Ordering Information ¹⁾	Calibrated Leak		
Calibrated leak					
with screw-in sleeve	-	Part No. 143 00	Part No. 143 01	Part No. 143 02	
with pin type casing and VCO fitting	-	-	Part No. 143 05	Part No. 143 06	
with pin type casing and hose nozzle	-	Part No. 143 08	Part No. 143 09	Part No. 143 10	
with cylindrical casing and VCO fitting	-	-	-	Part No. 143 14	

¹⁾ When ordering please always state leak rate, test pressure and helium concentration

Accessories for the PhoeniXL 300, PhoeniXL 300 Dry and PhoeniXL 300 Modul



Remote control unit

Remote Control Unit

For the PhoeniXL 300, PhoeniXL 300 Dry and PhoeniXL 300 Modul including connection line 4 m and fixing bracket for fixation to the housing of the PhoeniXL 300.



Extension line

8 m Extension Line


The use of extension lines permits operation of the PhoeniXL 300 up to 30 m away from the test objects. A maximum of three extension lines (of 8 m each) may be connected in series.



Search gas spray gun

Search Gas Spray Gun

The search gas spray gun with PVC hose (5 m long) is used for well aimed spraying of search gas at places where a leak is suspected.

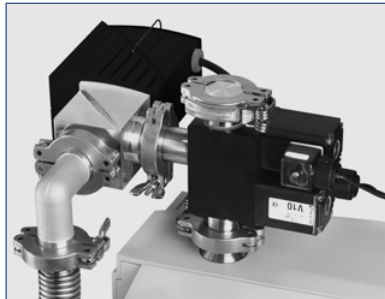

Partial flow system without pump

Partial Flow System only for PhoeniXL 300 and PhoeniXL 300 Modul


with following advantages:

- Faster response
- Entry into the measure mode already at an inlet pressure of 1000 mbar.
- Faster venting of large test objects

Equipment:

Valve block (with inlet valve, venting valve, bypass or purging valve) plus right-angle bellows valve DN 25 KF made of stainless steel, solenoid drives, suited for remote control by the PhoeniXL 300.


The partial flow systems are available without pumps.

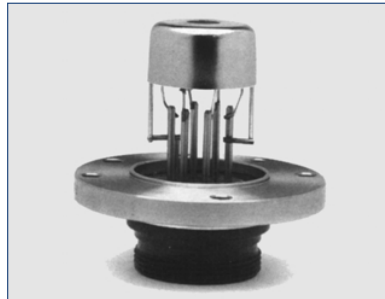

Replacement ion source

Replacement Ion Source

Complete replacement component, including two built-in yttrium coated iridium cathodes

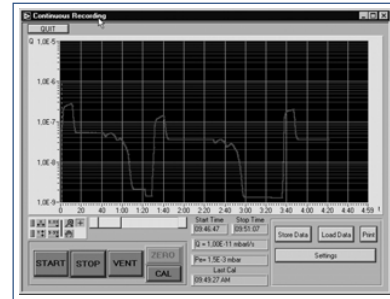

PC software LeakWare

PC Software LeakWare

The Windows PC software is used for data acquisition, documentation of the measurements and to control the operation of the leak detector.

Hardware > 486 DX and 8 MB Ram
Software Windows 95, 98, NT, 2000.



Transport case 300


Transport Case 300

For impact protected transportation of the PhoeniXL 300; complete with strong carrying handles and plastic castors. Separate case for accessories.

Ordering Information	Accessories
Remote control unit including fixing brackets	Part No. 252 002
Transport case 300	Part No. 252 004
Transport cart CART 300	upon request
Partial flow system ¹⁾ for PhoeniXL 300; 115 - 230 V / 50/60 Hz, without pump	Part No. 140 20
Pumps TRIVAC D 25 B, 230 V / 50/60 Hz Scroll, 100-230 V / 50/60 Hz	Part No. 113 35 Part No. 200 000 214
AF 16-25 exhaust filter, for partial flow system	Part No. 189 11
Replacement ion source	Part No. 165 04
PC software LeakWare	Part No. 140 90
8 m long extension line	Part No. 140 22
Search gas spray gun	Part No. 165 55

¹⁾ 5 centering rings, 5 clamping rings and 1 vacuum hose 1 m with DN 25 KF are included

Helium Sample Probes (Sniffers)

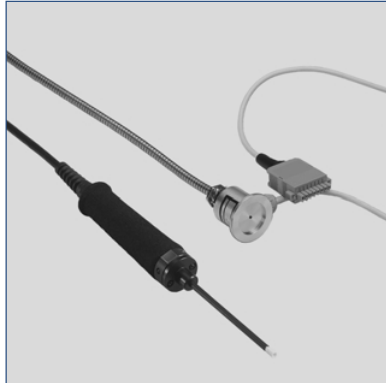

Helium sniffer line SL 300



Helium sniffer QUICK-TEST QT 100 with sniffer

Helium sniffers in connection with the leak detectors are used for leak testing test samples in which a helium overpressure is present. Besides accurate pinpointing of leaks it is also possible to determine the leak rate of the escaping helium.

Advantages to the User

Helium Sniffer Line SL 300 for PhoeniXL 300

- Sniffer line connects directly at the test connection
- Very fast response
- Extremely low detection limit $< 1 \times 10^{-7} \text{ mbar} \times \text{l} \times \text{s}^{-1}$
- Rigid sniffer tips 120 mm (included)
- Very rugged industrial design

Helium Sniffers QUICK-TEST QT 100 for PhoeniXL 300

- Sniffer leak detection for greater distances between test object and leak detector
- Diaphragm pump for sucking the search gas
- Smallest detectable leak rate $1 \times 10^{-6} \text{ mbar} \times \text{l} \times \text{s}^{-1}$
- Short response and decay times
- High sniffer velocity
- Switching power supply, can be run off mains voltages from 100 to 230 V AC

Typical Applications

- Storage and transportation vessels for gases and liquids
- Gas supply systems
- Gas compressors
- Components for the cooling and air conditioning industries
- Heat pumps and components for thermal energy recovery units
- Chemical production plants
- Supply and phone lines laid in the ground
- Power station condensers and turbines
- Window and door seals of car bodies, refrigerators and alike
- Revision checks on leak testing systems
- Measurement of helium concentrations ranging from ppm to %
- All hollow objects exposed to overpressures

Technical Data	SL 300	QT 100
Smallest detectable leak rate $\text{mbar} \times \text{l} \times \text{s}^{-1}$	$< 10^{-7}$	10^{-6}
Supply voltage	–	100-230 V, 50/60 Hz
Signal response time, approx. at a length of		
5 m s	< 1	1
20 m s	–	< 6
50 m s	–	20
Connection flange DN	25 KF	25 KF
Weight kg (lbs)	0.6 (1.3)	3.5 (7.7)
Ordering Information	SL 300	QT 100
Helium sniffer line SL 300 4 m long, straight handle, with red/green LED for go/no-go indication, rigid and flexible sniffer tip 120 mm	Part No. 252 003	–
Helium sniffer QUICK-TEST QT 100	–	Part No. 155 94
Sniffer line for the QT 100		
5 m	–	Part No. 140 08
20 m	–	Part No. 140 09

Connection Flanges

Leak Detectors		Helium Sniffers		Calibrated Leaks	
PhoeniXL 300	- DN 25 KF	SL 300	- DN 25 KF	TL 4	- DN 16 KF
PhoeniXL 300 Dry	- DN 25 KF	QT	- DN 25 KF	TL 6	- DN 16 KF
PhoeniXL 300 Modul	- DN 25 KF	ST 100	- DN 25 KF	TL 4-6	- DN 16 KF

If components of the same nominal width are connected, only one centering ring and one clamping ring will be required.

Connection Components

When wanting to connect accessories (helium sniffer and calibrated leaks) to a leak detector, the following reducers and components may be necessary:

Reduction	Reducers	Centering Rings Stainless steel/FPM		Clamping Rings Aluminum
DN 25 / 16 KF	Part No. 183 86, Aluminum or Part No. 885 04, Stainless steel	DN 25 KF, DN 16 KF,	Part No. 883 47 Part No. 883 46	DN 20 / 25 KF, Part No. 183 42 DN 10 / 16 KF, Part No. 183 41
DN 40 / 25 KF	Part No. 183 87, Aluminum or Part No. 885 05, Stainless steel	DN 25 KF, DN 40 KF,	Part No. 883 47 Part No. 883 48	DN 20 / 25 KF, Part No. 183 42 DN 32 / 40 KF, Part No. 183 43
DN 40 / 16 KF	Part No. 183 89, Aluminum or Part No. 885 07, Stainless steel	DN 16 KF, DN 40 KF,	Part No. 883 46 Part No. 883 48	DN 10 / 16 KF, Part No. 183 41 DN 32 / 40 KF, Part No. 183 43

The following metal hoses are recommended to connect the leak detectors to systems:

Nominal Width	Length	Ordering Information
DN 16 KF	1.0 m	Part No. 868 01
DN 16 KF	0.5 m	Part No. 867 91
DN 25 KF	1.0 m	Part No. 868 03
DN 25 KF	0.5 m	Part No. 867 93
DN 40 KF	1.0 m	Part No. 868 05
DN 40 KF	0.5 m	Part No. 867 95

Further connecting components, like quick clamping rings and other components are described in Product Section C13 "Vacuum Fittings and Feedthroughs"

Sales and Service Net Worldwide

Germany

Leybold Vacuum GmbH
Bonner Strasse 498
D-50968 Cologne
Phone: +49-221-347 1234
Fax: +49-221-347 1245
sales@leybold.com

Leybold Vacuum GmbH
Sales Area North/East
Branch office Berlin
Buschkrugallee 33
1. Obergeschoss
D-12359 Berlin
Phone: +49-30-435 609 0
Fax: +49-30-435 609 10
sales.berlin@leybold.com

Leybold Vacuum GmbH
Sales Area South/Southwest
Branch office Munich
Karl-Hammerschmidt-Strasse 28
D-85609 Aschheim/Dornach
Phone: +49-89-357 33 90
Fax: +49-89-357 33 933
sales.muenchen@leybold.com
service.muenchen@leybold.com

Leybold Vacuum GmbH
Sales Area West
Branch office Cologne
Emil-Hoffmann-Strasse 43
D-50996 Cologne-Suerth
Phone: +49-221-347 1270
Fax: +49-221-347 1291
sales.koeln@leybold.com

Leybold Vacuum GmbH
Service Center
Emil-Hoffmann-Strasse 43
D-50996 Cologne-Suerth
Phone: +49-221-347 1439
Fax: +49-221-347 1945
service@leybold.com

Leybold Vacuum GmbH
Mobile after sales service
Emil-Hoffmann-Strasse 43
D-50996 Cologne-Suerth
Phone: +49-221-347 1765
Fax: +49-221-347 1944
kundendienst@leybold.com

Leybold Vacuum
Dresden GmbH
Zur Wetterwarte 50, Haus 304
D-01109 Dresden
Service:
Phone: +49-351-88 55 00
Fax: +49-351-88 55 041
info@leybold-dresden.de
www.leybold-dresden.de

Hotline

Sales: +49-221-347 1234
Service: +49-221-347 1765

sales@leybold.com
service@leybold.com

Europe

Belgium
Leybold Vacuum Nederland B.V.
Belgisch bijkantoor
Leuvensesteenweg 542-9A
B-1930 Zaventem
Sales:
Phone: +32-2-711 00 83
Fax: +32-2-720 83 38
sales.belgium@leybold.com
Service:
Phone: +32-2-711 00 82
Fax: +32-2-720 83 38
service.belgium@leybold.com

France
Leybold Vacuum France S.A.
7, Avenue du Québec
Z.A. de Courtaboeuf, B.P. 42
F-91942 Courtaboeuf Cedex
Sales and Service:
Phone: +33-1-69 82 48 00
Fax: +33-1-69 07 57 38
sales.france@leybold.com

Leybold Vacuum France S.A.
Valence Factory
640, Rue A. Bergès - B.P. 107
F-26501 Bourg-lès-Valence Cedex
Phone: +33-4-75 82 33 00
Fax: +33-4-75 82 92 69
marketing.valence@leybold.fr

Great Britain
Leybold Vacuum UK Ltd.
Waterside Way, Plough Lane
GB-London SW17 0HB
Sales:
Phone: +44-20-8971 7000
Fax: +44-20-8971 7001
sales@leybold.com
Service:
Phone: +44-20-8971 7030
Fax: +44-20-8971 7003
service@leybold.com

Italy
Leybold Vacuum Italia S.p.A.
8, Via Trasimeno
I-20128 Milano
Sales:
Phone: +39-02-27 22 31
Fax: +39-02-27 20 96 41
sales@leybold.it
Service:
Phone: +39-02-27 22 31
Fax: +39-02-27 20 96 41
service@leybold.it
Field Service Base
Z.I.Le Capanne
I-05021 Acquasparta (TR)
Phone: +39-0744-93 03 93
Fax: +39-0744-94 42 87
service@leybold.it

Netherlands
Leybold Vacuum Nederland B.V.
Computerweg 7
NL-3542 DP Utrecht
Sales and Service:
Phone: +31-346-58 39 99
Fax: +31-346-58 39 90
sales.netherlands@leybold.com
service.netherlands@leybold.com

Spain
Leybold Vacuum España S.A.
C/ I. Huelva, 7
E-08940 Cornellà de Llobregat
(Barcelona)
Sales:
Phone: +34-93-666 46 16
Fax: +34-93-666 43 70
sales.spain@leybold.com
Service:
Phone: +34-93-666 49 51
Fax: +34-93-685 40 10

Sweden
Leybold Vacuum Scandinavia AB
Box 9084
SE-40092 Göteborg
Sales and Service:
Phone: +46-31-68 84 70
Fax: +46-31-68 39 39
info@leybold.se
Visiting/delivery address:
Datavägen 57B
SE-43632 Askim

Switzerland
Leybold Vacuum Schweiz AG
Leutschenbachstrasse 55
CH-8050 Zürich
Sales:
Phone: +41-1-308 40 50
Fax: +41-1-302 43 73
sales@leybold.ch
Service:
Phone: +41-1-308 40 62
Fax: +41-1-308 40 60

America

USA
Leybold Vacuum USA Inc.
5700 Mellon Road
Export, PA 15632
info@leyboldvacuum.com
Sales:
Eastern & Central time zones
Phone: +1-724-327-5700
Fax: +1-724-733-1217
Pacific, Mountain,
Alaskan & Hawaiian time zones
Phone: +1-480-752-9191
Fax: +1-480-752-9494
Service:
Phone: +1-724-327-5700
Fax: +1-724-733-3799

Asia

P.R. China
Leybold Vacuum (Tianjin)
International Trade Co., Ltd.
Beichen Economic
Development Area (BEDA),
No. 8 Western Shuangchen Road
Tianjin 300400, China
Sales and Service:
Phone: +86-22-2697 0808
Fax: +86-22-2697 4061
Fax: +86-22-2697 2017
leybold@leybold.com.cn

Leybold Vacuum (Tianjin)
Equipment Manufacturing Co., Ltd.
Beichen Economic
Development Area (BEDA),
No. 8 Western Shuangchen Road
Tianjin 300400, China
Phone: +86-22-2697 0808
Fax: +86-22-2697 4061
Fax: +86-22-2697 2017
leybold@leybold.com.cn

Leybold Vacuum (Tianjin)
International Trade Co., Ltd.
Beijing Branch:
1-908, Beijing Landmark Towers
8 North Dongsanhuan Road
Chaoyang District
Beijing 100004, China
Sales and Service:
Phone: +86-10-6590-7607
Fax: +86-10-6590-7622

Leybold Vacuum (Tianjin)
International Trade Co., Ltd.
Shanghai Branch:
Add: No. 33, 76 Futedong San
Rd., Waigaoqiao FTZ,
Shanghai 200131, China
Sales and Service:
Phone: +86-21-5064-4666
Fax: +86-21-5064-4668
leybold_sh@leybold.com.cn

Leybold Vacuum (Tianjin)
Guangzhou Branch:
Add: G/F,#301 Building,
110 Dongguangzhuang Rd.
Tianhe District,
Guangzhou 510610, China
Sales:
Phone: +86-20-8723-7873
Phone: +86-20-8723-7597
Fax: +86-20-8723-7875
leybold_gz@leybold.com.cn

India
Leybold Vacuum India Pvt Ltd.
A-215 Road No. 30
MIDC Wagle Industrial Estate
Thane(W) - 400 604 Maharashtra
India
Sales and Service:
Phone: +91-22-2581 2929
Fax: +91-22-2581 2626
ivt2004@yahoo.com

Japan
Leybold Vacuum
Japan Co., Ltd.
Head Office
Tobu A.K. Bldg. 4th Floor
23-3, Shin-Yokohama
3-chome
Kohoku-ku, Yokohama-shi
Kanagawa-ken 222-0033
Sales:
Phone: +81-45-4713330
Fax: +81-45-4713323

Leybold Vacuum
Japan Co., Ltd.
Osaka Branch Office
MURATA Bldg. 7F
2-7-53, Nihi-Miyahara
Yodogawa-ku
Osaka-shi 532-0004
Sales:
Phone: +81-6-6393-5211
Fax: +81-6-6393-5215

Leybold Vacuum
Japan Co., Ltd.
Tsukuba Technical S.C.
Tsukuba Minami Daiichi
Kogyo Danchi
21, Kasumi-no-Sato,
Ami-machi, Inashiki-gun
Ibaraki-ken, 300-0315
Service:
Phone: +81-298-89-2841
Fax: +81-298-89-2838

Korea
Leybold Vacuum Korea Ltd.
#761-4, Yulkeum-ri,
SungHwan-eup, Cheonan-City
Choongchung-Namdo,
330-807, Korea
Sales:
Phone: +82-41-580-4420
Fax: +82-41-588-3737
Service:
Phone: +82-41-580-4415
Fax: +82-41-588-3737

Singapore
Leybold Vacuum
Singapore Pte Ltd.
No.1, International
Business Park,
B1-20B, The Synergy
Singapore 609917
Sales and Service:
Phone: +65-66652910
Fax: +65-65668202
vacuum@leyboldvac.com.sg

Taiwan
Leybold Vacuum Taiwan Ltd.
No 416-1, Sec. 3
Chung-Hsin Rd., Chu-Tung
Hsin-Chu, Taiwan, R.O.C.
Sales and Service:
Phone: +886-3-5833988
Fax: +886-3-5833999